# 5. Troubleshooting

## 5-1 No Power

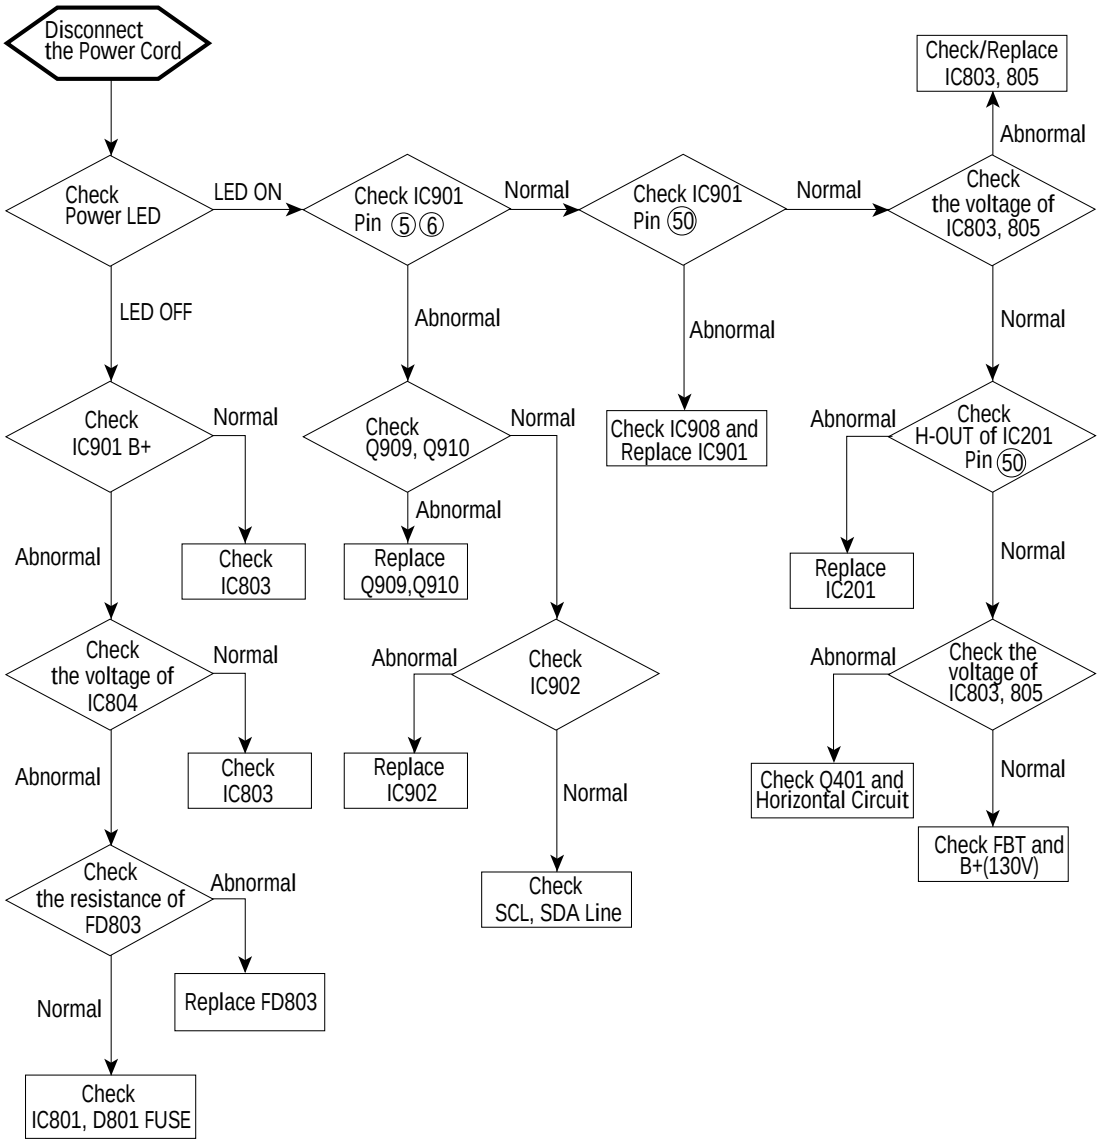

## 5-2 No Raster (Sound OK)

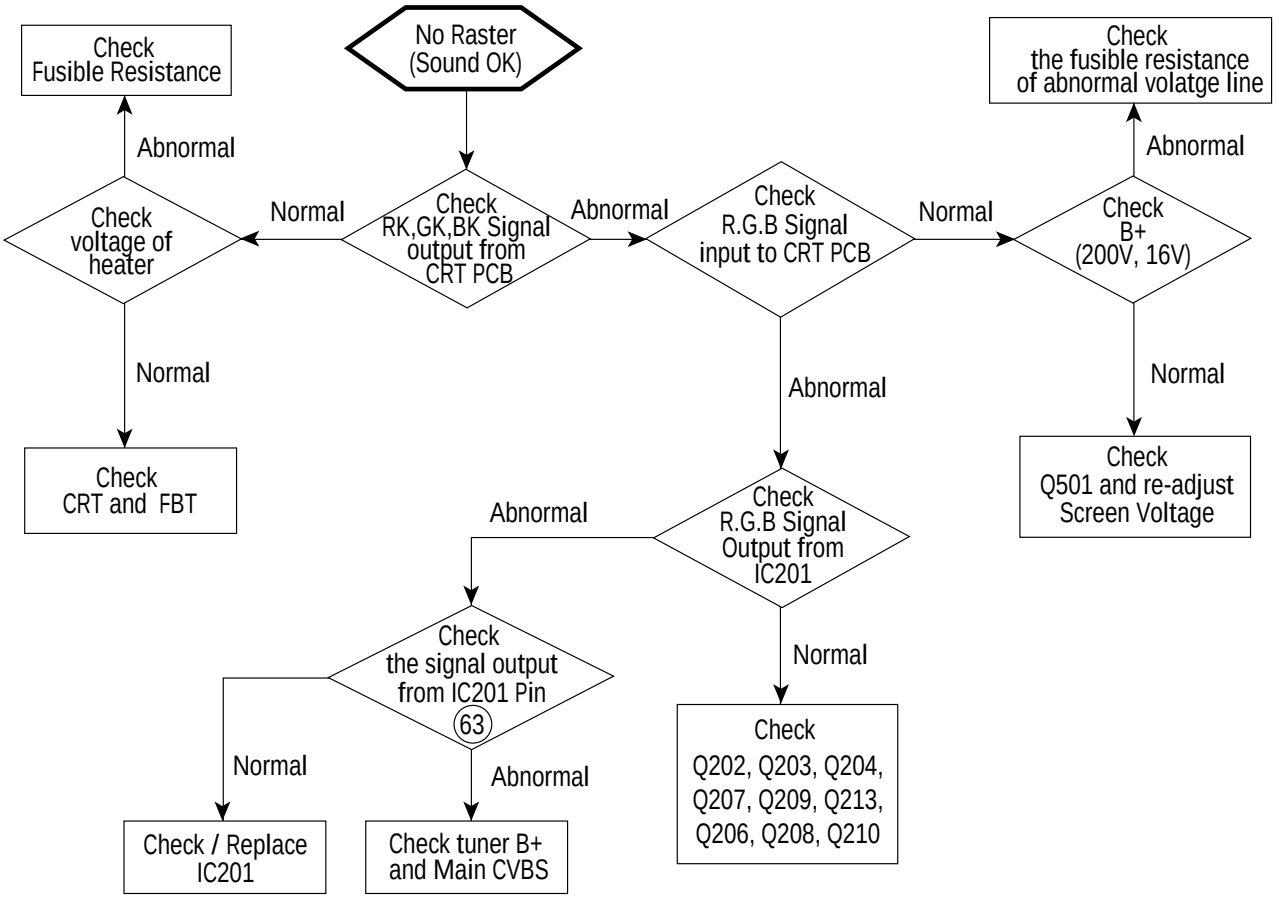

## 5-3 No Sound

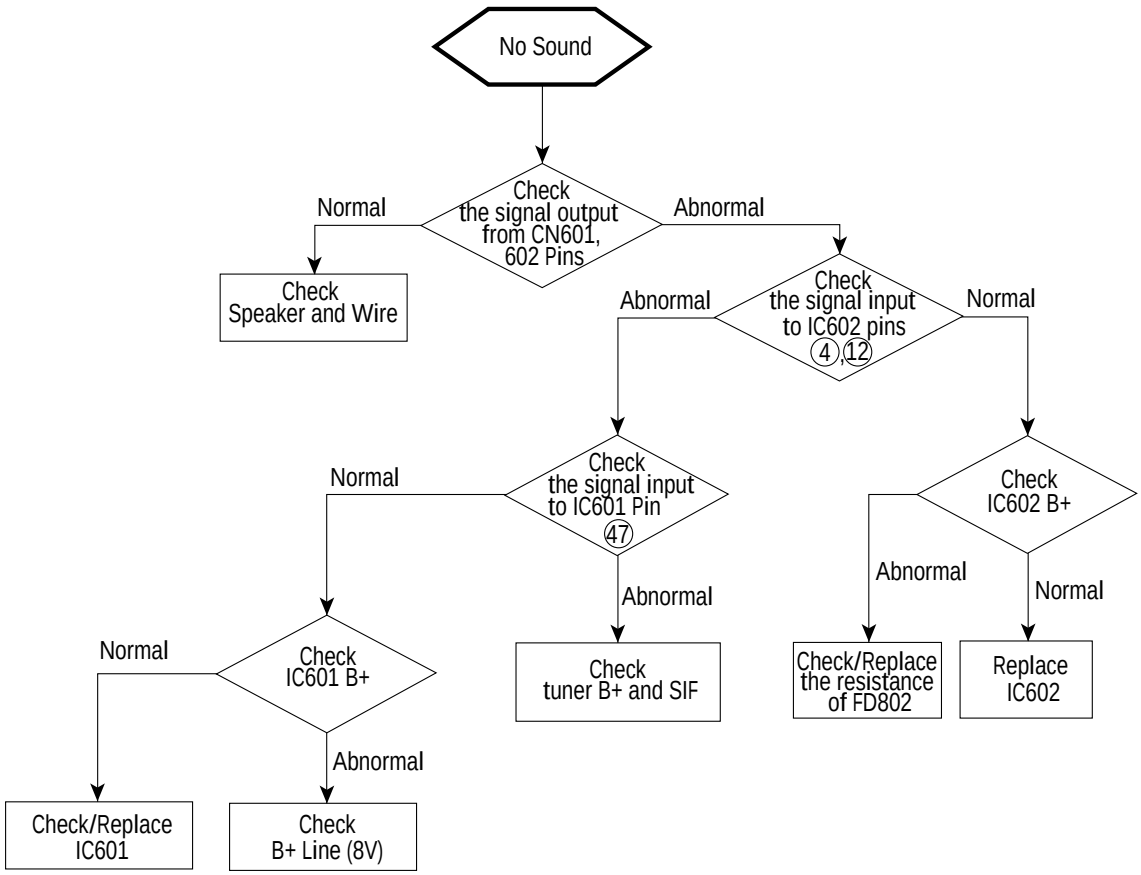
No Sound
Check the signal output from CN601, 602 Pins
Normal
Abnormal
Check Speaker and Wire
Check the signal input to IC602 pins ④,⑫
Abnormal
Normal
Check the signal input to IC601 Pin ㊼
Normal
Abnormal
Check IC602 B+
Abnormal
Normal
Check IC601 B+
Normal
Abnormal
Check tuner B+ and SIF
Check/Replace the resistance of FD802
Replace IC602
Check/Replace IC601
Check B+ Line (8V)
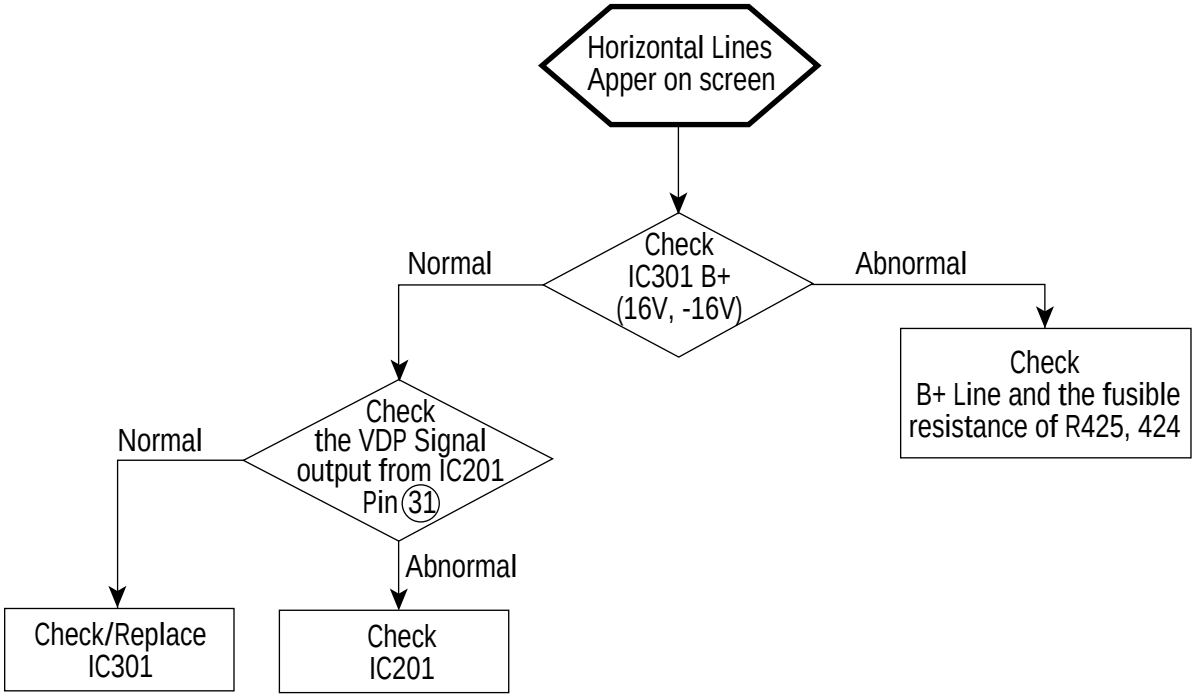
## 5-4 Horizontal Lines Appear on screen